TOW BAR FIELD KIT PART NO. A-8500

WILLYS MODEL M.B. 1/4 TON 4 x 4 FORD MODEL G.P.W. 1/4 TON 4 x 4

List of Parts Required

No. Req.	Part No.	Part Name
1 2 1 2 2 4 1 4 1	A-7927 A-6870 A-8105 A-8103 5121 5790 A-7811 53014 53013 A-7881 A-9183	Tow bar and frame bracket assembly Spacer - front bumper gusset Tow bar grille bracket assembly Tow bar grille bracket hook Plain washer Nut - hex 1/4" - 20 thread Towing caution plate Screw - round head #6-32 thread x 5/16" Nut #6-32 thread Pintle hook reinforcing plate Installation instructions

List of Tools Required

2 1 2	1/2" open end v 7/16" open end 5/8" open end v	wrench	
2 1 1 1 1	punch to enter hammer pliers	5/16" 1	nole
1 1 1	screw driver - electric drill 5/32" drill	6"	

Installation Instructions

This kit provides the parts necessary to equip the 1/4 ton vehicle with a tow bar for tandem operation.

First remove the bumper assembly discarding the bumper bar for salvage. The bolts and nuts used to mount the bumper are used to install the tow bar.

Place the tow bar and frame bracket assembly Part No.
A-7927 in position with the tow bar brackets over the frame bumper gussets and with the bracket holes in alinement with the bumper mounting holes. Attach the tow bar loosely at the two end holes using the bolts, spacers and nuts originally used to mount the bumper. Install the other two bolts in the two inner holes using the two new spacers Part No. A-6870 supplied. Tighten all four nuts firmly in position.

Next install the tow bar grille bracket assembly, Part No. A-8105. This bracket is held in place on the grille by the two tow bar grille bracket hooks, Part No. A-8103. Lay the tow bar against the grille to determine the correct position for mounting the bracket. When correctly located attach the hracket to the grille using the two hook bolts with plain washer, Part No. 5121, against the outside face of the bracket. Install the hooks in the notches at the rear edge of the grille bar. Use four nuts, Part No. 5790. Clamp the bracket firmly in place with two of the nuts and use the other two as lock nuts.

Install the pintle hook reinforcing plate Part No. 4-7881. This is placed in the channel of the rear frame reinforcement under the nuts which attach the pintle hook. Remove the four nuts and lockwashers and place the reinforcement in position. Replace the nuts and washers drawing them tight. This reinforcement is designed to have 1/16 drawup when assembled.

plate Part No. A-7811 on the instrument panel. Locate it in line with the other plates and to the left. Use the plate as a template

and drill the four holes 5/32" in diameter. Fasten the plate in position with four round head machine screws No. 6-32 thd. x 5/16" Part No. 53014 and four nuts Part No. 53013.

Instal lation Instructions
Part No. A-9183

